



CITIPRO SEAT WARRANTY AND INSTRUCTIONS



RUSPA
INNOVATION MANUFACTURING


100% MADE IN ITALY

		pg
1	PRODUCT DESCRIPTION	1
2	MODELS	2
3	MATERIALS	3
4	WARRANTY AND ASSISTANCE	4
5	KIT SUPPLIED	4
6	ASSEMBLY AND DISASSEMBLY INSTRUCTIONS	5
7	CLEANING	7
8	GRAFFITI REMOVAL	7
9	SANITISING	7
10	POLISHING AND SCRATCH REMOVAL	8
11	WARNINGS	8
12	DISPOSAL	8

1. PRODUCT DESCRIPTION





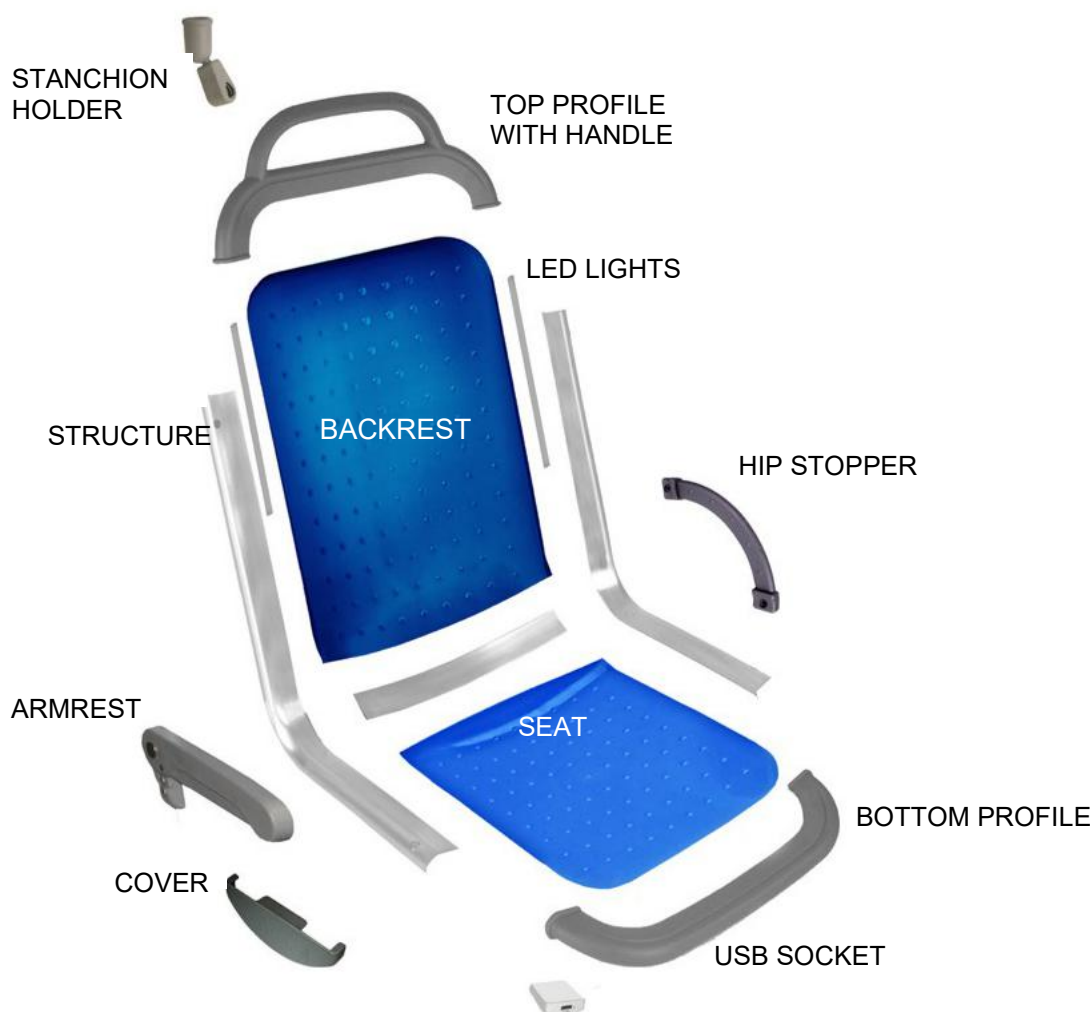



The CITIPRO seat is a modular system consists of:

- Top profiles with or without handle in plastic or brushed, polished, painted or anodised aluminium
- Interchangeable seat and back in plastic, glued fabric or padded fabric - Back support in plastic or aluminium
- Right or left armrest in plastic
- Hip stopper in plastic or aluminium
- Plastic side cover
- USB socket and LED lights
(for maintenance of the USB socket and LED lights contact the manufacturer)





2. MODELS

TYPES OF SEAT	STRUCTURE	TOP/BOTTOM PROFILE	SEAT/BACKREST
 Standard height 563 width 432 depth 513	Aluminium: brushed, polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Polycarbonate Polyethylene (PE) Fabric
 PMR height 640 width 440 depth 513	Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Polycarbonate Polyethylene (PE) Fabric
 Junior height 509 width 432 depth 513	Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Polycarbonate Polyethylene (PE) Fabric
 Jumbo height 509 width 624,5 depth 513	Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Polycarbonate Polyethylene (PE) Fabric
 Tip up height 665 width 449 depth open 555 closed 234	Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Polycarbonate Polyethylene (PE) Fabric
 Flip height 494 width 432 depth open 430 closed 113	Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Polycarbonate Polyethylene (PE) Fabric
 Wood height 563 width 432 depth 513	Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	Wood
 Multiplace height 640 variable width depth 513	Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Aluminium: brushed polished, painted or anodised	PA PA Antibacterial PA Antimicrobial Polycarbonate Polyethylene (PE) Fabric

3. MATERIALS



PRODUCT	ALUMINIUM	STAINLESS STEEL	PA	PA ANTIBACTERIAL	PA ANTIMICROBIAL	POLYCARBONATE	POLYETHYLENE	WOOD	FABRIC
FRAME									
	✓								
PLASTIC TOP AND BOTTOM PROFILE with or without handle									
		✓	✓	✓	✓				
SEATS AND BACKRESTS for all models									
	✓	✓							
METAL TOP AND BOTTOM PROFILE with or without handle									
			✓	✓	✓	✓	✓	✓	✓
ARMRESTS right or left, upwards tilting									
		✓	✓	✓	✓				
HIP STOPPER corridor side									
	✓		✓						
PLASTIC STANCHION SUPPORT for plastic top profiles									
		✓	✓	✓	✓				
METAL COLUMN SUPPORT for metal top profiles									
	✓		✓						
COVER corridor side									
			✓	✓	✓				
BASES with wall fixing									
	✓	✓	✓						
ADAPTERS made to measure									
		✓							



4. WARRANTY AND ASSISTANCE

Thank you for choosing and purchasing our product and for the trust you have placed in us. This product has a 24-month warranty from the delivery date as displayed on a document issued by the manufacturer (e.g. document or delivery note that came with the goods). The warranty is valid for any production defects, quality of the materials used and in the technical and aesthetic characteristics if they differ from that described in the manufacturer's specifications.

In case of non-compliance of the ordered product, you have 60 days from receipt of goods to report any discrepancies.

The aforementioned guarantee will become void if the product is used for any purposes other than those for which it was designed.

This guarantee does not cover operations and/or repairs and/or any spare parts that are defective due to:

- Failure to follow the use and maintenance instructions in the booklet supplied - Negligence and improper use
- Incorrect installation
- Maintenance or repairs carried out by unauthorized personnel and/or use of non-original spare parts - Damage caused during transport, unless Ruspa Officine S.p.A. carried this out or defects caused by actions that are not attributable to product conformity defects.

Our Customer Helpline is available Monday to Friday from 08:00 to 17:00 on +39/011-9234111.



5. KIT SUPPLIED

A maintenance kit is supplied together with the seat comprising:

- 1 magnetic pen for removing the screw covers that secure the top and bottom profiles
- 1 torx key for disassembling the fixing screws
- 2 round magnets
- 2 screw covers

At the end customer's disposal we provide a complete maintenance kit consisting of:

- 1 magnetic pen for the extraction of the covers of the screws that fix the headers
- 1 Torx-key for removing the fixing screws
- 1 abrasive pad for the maintenance of brushed aluminum, also suitable for the removal of small superficial scratches on the structure
- 2 anti-vibration adhesive strips
- 2 round magnets
- 2 screw covers
- 1 bottle of detergent

image1

Code. 6759080



Image 1

6. ASSEMBLY AND DISASSEMBLY INSTRUCTIONS



Remove the magnetic covers from the frame end with the supplied magnetic pen. One end has a positive charge and the other negative. Turn the pen round to identify which end has the correct magnetic charge. (Image 2)



Image 2

Unscrew the torx screws with the key provided and remove them completely. (Image 3)



Image 3



6. ASSEMBLY AND DISASSEMBLY INSTRUCTIONS

Remove the top profile by pulling upwards.
If necessary, apply left and right alternating pressure by gently tapping with a non-marking rubber mallet. (Image 4)



Image 4

Slide backrest or seat out from the metal structure. If the anti-vibration strips are damaged, replace them with the spare ones supplied with the kit. (Image 5)

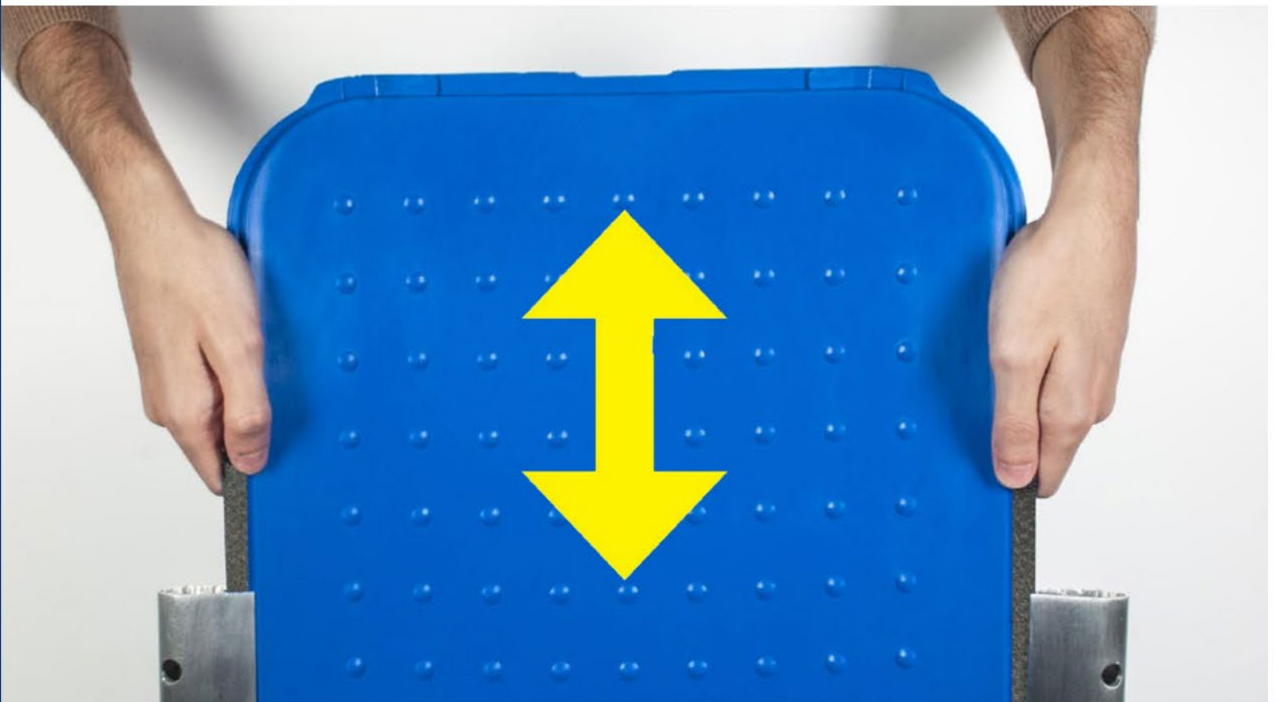


Image 5

To reassemble, repeat the above operations in reverse order.

7. CLEANING

For cleaning metal, plastic, imitation leather or other parts:

- Use a standard soap-based cleaning product and water - It is always advisable to carry out a test of the chosen product on less visible areas before starting complete cleaning
- For deeper cleaning, we recommend a non-abrasive liquid detergent such as Pulimax MA-FRA®
- Apply the product to a clean cloth or sponge and rub until stains are eliminated
- Rinse and clean with a dry cloth
- The product has low toxicity. It is advisable to use adequate protection.



8. GRAFFITI REMOVAL

- For more tenacious marks such as permanent markers or paint, we recommend LOCTITE® SF 7063 cleaner spray
- Clean with a dry cloth
- The product has low toxicity. It is advisable to use adequate protection, gloves and mask. (Image 6)



Immagine 6

9. SANITISING

All CITIPRO seats can be disinfected with normal ethyl alcohol, or with disinfectant products such as those from the SANITIZED® range.

It is always advisable to conduct a test on a less visible area before commencing complete cleaning. It is advisable to use adequate protection.





10. POLISHING AND SCRATCH REMOVAL

If the aluminium structure is not painted or anodised, the original brushed finish can be restored by rubbing with the special medium-grain Scotchbrite™ 3M abrasive sponge to erase scratches and restore the original satin finish. Then clean with a normal detergent.

Metal or plastic parts that are badly damaged or which cannot be restored can be easily replaced, as described in the section describing maintenance and replacement of parts. (Image 7)



Image 7



11. WARNINGS

- Use only original components and spare parts
- Use cleaning fluids and sanitisers recommended by the manufacturer
- The use of non-compliant materials or equipment, such as those described below, are NOT recommended:
 - Steam cleaners with temperatures above 100°
 - Bleaches, acids, paint thinners
 - Abrasive pastes or emery papers that could seriously damage the seat surfaces.

Ruspa Officine S.p.A. declines all responsibility for any damage to persons or things caused by non-compliance with these warnings and instructions.

In such cases, the guarantee will be invalidated.



12. DISPOSAL

The CITIPRO seat is modular and so can be easily disassembled. It can be recycled as it is or after simple disassembly, as more than 90% of the components are made of single materials.

Only those models with padded seats require additional work to separate them into their constituent parts for recycling, as they are made of a mix of plastic, foam and coverings.